

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : MITSUBISHI DENKI BLDG., 2-2-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
http://Global.MitsubishiElectric.com

Distributed by:
MITSUBISHI ELECTRIC AUSTRALIA PTY LTD.
(Incorporated in New South Wales) ABN 58 001 215 792

New South Wales:

348 Victoria Road, Rydalmare 2116 Ph: (02) 9684 7777

Queensland

Unit 12, 469 Nudgee Road, Hendra, QLD 4011 Ph: (07) 3263 2000

South Australia / Northern Territory:

77 Port Road, Hindmarsh 5007 Ph: (08) 8340 2000

Western Australia:

Unit 5, 329 Collier Road, Bassendean 6054 Ph: (089) 9377 3400

Victoria / Tasmania:

Unit 4, 303 Burwood Highway, East Burwood 3151 Ph: (03) 9262 9855

Distributed by
BLACK DIAMOND TECHNOLOGIES LIMITED (BDT)

Wellington Office (Head Office)

1 Parliament Street PO Box 30-772 Lower Hutt Ph: (04) 560 9100, Fax: (04) 560 9133

Auckland Office


Unit 1, 4 Walls Road Penrose Auckland PO Box 12-726 Ph: (09) 526 9340, Fax: (09) 526 9369

Christchurch Office

Suite 2 Level 1 37 Manderville Street Christchurch PO Box 1604 Ph: (03) 341 7052,
Fax: (03) 341 7054

MITSUBISHI

Refrigerator-Freezer

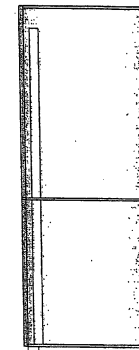

MR-H290S

**OPERATING
INSTRUCTIONS**



Easy Refrigerator Use

CONTENTS

Before using your refrigerator

From installation to operation **2**

Using each compartment

Compartment name and use **3**

Usage : Controlling Temperature for Each Compartment **4**

Effective Use of your refrigerator **4**

Usage : Freezer Compartment **5**

Usage : Refrigerator Compartment **6**

Maintenance and troubleshooting

Removing and maintaining **7**

What to do (during long periods of non use and transport) **7**

Safety precautions

8

Troubleshooting

9

Specifications

10

- Please read this manual carefully and follow the information contained within. In particular, be sure to read the safety precautions before using this refrigerator.
- Be sure to receive your copy of the warranty from the retailer and confirm that the purchase date and retailer name are written on the warranty.
- Store this operating instructions manual and the warranty in a safe place.

- This refrigerator was manufactured for refrigerating and freezing of foods in general households. For commercial use please use a commercial refrigerator-freezer.
- The principal plastic components indicate the material name to facilitate recycling.


Specifications

Model name	MR-H290S	
Type	Refrigerator-Freezer	
Volume	290L (Refrigerator room : 175L Freezer room : 115L	
Outside dimension	Width	555mm
	Depth	635mm
	Height	1610mm
Weight	54kg	
Voltage	230V/240V	
Frequency	50/60 Hz	

	Accessories	Quantity
Refrigerator compartment	Refrigerator compartment shelf (large)	2
	Refrigerator compartment shelf (small)	1
	Vegetable case	1
	Utility box (Free egg tray attachment)	1
	Free pocket	2
Freezer compartment	Bottle pocket	1
	Clean ice making tray	1
	Ice cube storage box	1
	Freezer compartment shelf	1
	Freezer case (large)	1
	Freezer case (small)	1
	Drain pan	1

This appliance is designed for use in Australia and New Zealand only and cannot be used in any other country. No service is available outside of Australia and New Zealand.

Compartment name and Use

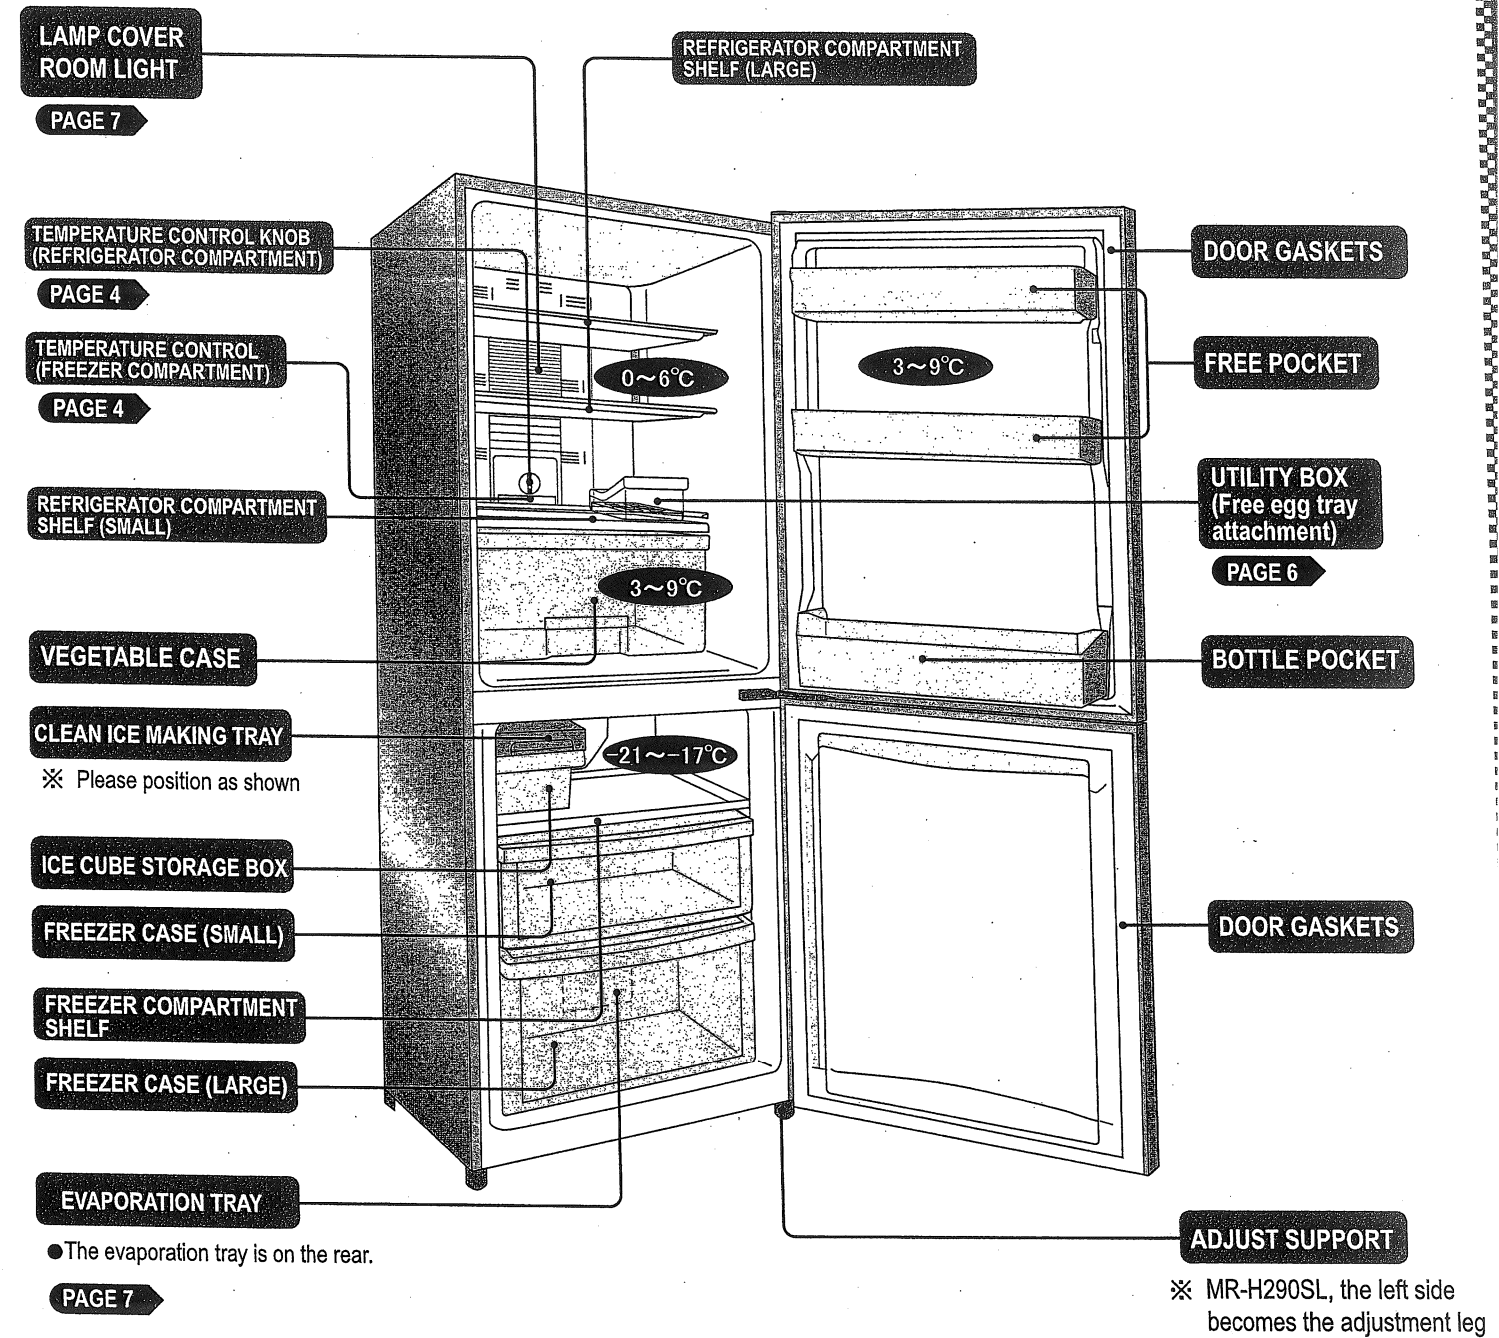

USER TRIP ● The temperature listed above for the refrigerator and freezer compartments represent the temperatures measure roughly at the lower center of each compartment with the temperature control knob set between the COLDER and WARMER settings, the refrigerator empty, the doors closed, and a stable ambient temperature of 30°C

Safety Precautions

Usage : Freezer Compartment

- Danger and degree of danger caused by improper handling are categorised and described using the following symbols.
- Meaning of symbols.
- In the case of malfunction or defect, immediately turn off the refrigerator and contact your refrigerator retailer, the Mitsubishi Electric Maintenance Service, or representative.

Do not do	Do not touch	Do not attempt to disassemble, repair or alter	Do not get wet or dampen with water
Be sure to follow the instructions as indicated	Be sure to remove the power cord plug from the outlet	Be sure to ground the refrigerator	Do not touch with wet hands.

Warning

<p>Anchor the refrigerator to a strong wall or post to prepare for an earthquake. This will prevent tipping over and causing injury. Page 2</p> <p>Use a dedicated outlet for the power supply that meets the rating specified on the rating label. Page 2 Only use an outlet that meets the specified rating</p>	<p>Do not store medicine or scientific specimens in the refrigerator. Items that require strict management cannot be stored in household refrigerator.</p> <p>Do not wash with water or spill food liquids on the refrigerator. Water and food liquids can cause electric shock or a fire. Clean up spills immediately.</p> <p>Do not pull on the power cord to remove the plug. Doing so can damage the power cord and cause electric shock or a fire.</p> <p>Do not use damaged power cords or plug or loose outlets. Doing so can cause electric shock or a fire.</p>	<p>Do not attempt to disassemble, repair or alter. Doing so can cause injury, electric shock or a fire.</p> <p>Do not use flammable sprays near the refrigerator. Sparks from electric contact can cause a fire.</p> <p>Do not wash with water or spill food liquids on the refrigerator. Water and food liquids can cause electric shock or a fire. Clean up spills immediately.</p> <p>Before disposing of the refrigerator, be sure to pull the packing off of the doors. Children can be put in danger if they are trapped in side the refrigerator.</p> <p>Use only interior light bulbs with the special rating. Using non-specified light bulbs can cause a fire. Page 7 Specified products only</p> <p>Do not pull on the power cord to remove the plug. Doing so can damage the power cord and cause electric shock or a fire.</p> <p>Do not hang on the door or door handle. The refrigerator may tip over and cause injury.</p>	<p>If the power cord is damaged, call our Mitsubishi Service Center for the replacement.</p> <p>If the power cord is damaged, purchase a new cord from Mitsubishi Service Center.</p> <p>Make sure that the power cord is designed for this model. </p> <p>Do not place containers with water on top of the refrigerator. Wet electrical parts can cause electric shock or a fire.</p> <p>Do not place volatile flammable items inside the refrigerator. Benzene, cosmetics and hair products can catch fire and explode.</p> <p>Do not place objects on top of the refrigerator. The objects may fall when the doors are opened and closed and cause injury.</p> <p>Remove any dust from the power cord plug. Insulation failure can cause a fire.</p> <p>Remove the power cord plug from the outlet before maintenance or changing the interior light bulb. Failure to do so can cause electric shock or injury.</p> <p>Do not press the back of the refrigerator against the power cord plug. Do not damage the power cord. Pressing against, placing weight on, folding, or bundling the power cord can cause electric shock or a fire.</p>
---	--	--	---

Caution

<p>Use the adjusting supports so the refrigerator is securely installed on a strong level surface. If the refrigerator is not installed properly it could move and cause injury. Page 2</p> <p>Do not place glass bottles in the freezer compartment. The contents of the bottle can freeze and cause the bottle to break and cause injury.</p> <p>Do not put your hands or feet underneath the refrigerator. The metal plates, etc., on the bottom of the refrigerator can cause injury.</p>	<p>Use transportation handholds when transporting the refrigerator. Holding other parts can cause injury. Page 7</p> <p>Do not eat food that has a strange odour or is discoloured. Doing so can cause food poisoning or illness.</p> <p>Do not put your hands or feet underneath the refrigerator. Use the door handle to close the door.</p>	<p>Do not excessively pack the refrigerator with food or remove the shelves with excessive force. Doing so can cause food items to fall and cause injury.</p> <p>Do not touch food items or containers in the freezer compartment with wet hands. Doing so can cause frostbite.</p>
---	--	---

Ice-Making: Making good-tasting ice with high transparency.

- 1 Assemble the upper and lower trays and fill with water, making sure not to exceed the level indicated by the arrow.
- 2 The upper tray produces ice with high transparency.
- 3 When the ice is ready, bend the tray with the upper and lower trays still assembled to remove the ice.

User tip


- Making ice in the upper tray takes longer as the ice maker removes bubbles and minerals from the tap water.
- The ice-making time depends on the amount of water used.
- When using only the lower tray, it is not possible to produce ice with high transparency.
- Ice made with mineral water or water with a high mineral content may have white sediment (white crystals). This is not harmful as this happens when the mineral content crystallizes.
- If ice is kept in the freezer for longer periods, the individual ice cubes might join together or become smaller (as a result of the phenomenon known as sublimation).
- There may be white areas or bubbles in the ice.
- The transparency of the ice could change in the following cases due to creating more white sections:
 - When using water with a high hardness level (mineral sediment in the ice).
 - The ambient temperature or the usage condition of the refrigerator changes.
 - When ice is stored for long periods in the ice storage box. (This causes frost on the ice surface. Frost can be removed by placing it in water).

Note

- The lower tray produces a whiter ice than the top tray due to impurities in the water and should be used when flavour is not an issue.
- If ice-making is carried out with white ice in the lower tray, it will not be possible to produce ice with high transparency. Remove the ice in the lower tray before making ice.
- If the ice-making trays are bent as shown in the picture or excessive force is applied, this could lead to cracking of the trays.
- In case of cracking, discontinue use.
- Do not make ice in the ice storage box as this could cause cracking of the box.

Removing and inserting the freezing cases (large and small)

- Use the reverse order when inserting the cases.
- 1 Pull the freezing case all the way out.
 - 2 Lift up in your direction to pull and remove.

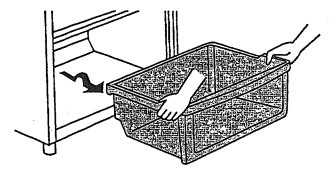

Note

- Make sure that no food items are protruding from the freezing case when storing them.
- A protruded food item could prevent full closing of the door, causing frost buildup in the freezer and poor cooling or equipment failure.
 - Could cause damage to foods or the freezing case.
 - After inserting foods, make sure that the freezing case is definitely inserted all the way to the back to prevent partial opening of the freezer door.

